



NEO Power Supply With Battery Backup

NEO FLX 24V 5A FLX M

Publication date 2026-07-07

Abstract

PCB: CEO3_uP



Table of Contents

1. About NEO	4
1.1. About translation of this document	4
2. Component overviews	5
2.1. Component overview	5
3. Enclosures	5
3.1. General assembly instructions	5
3.1.1. Mounting - wall mounting	5
3.1.2. Indoor mounting in 19" rack	6
3.2. Mounting	6
3.3. Bracket	6
4. Batteries - placement and connection	7
4.1. Connection of batteries in FLX S, FLX M and FLX L	7
4.2. Connect battery fuse / blade fuse	8
5. Motherboard description	9
5.1. Connect in this order	9
5.2. Connect alarm on P3	10
5.3. Connect load	10
5.4. Connect mains	11
5.5. Control alarm limit	11
5.6. Fuses	12
6. Commissioning - how to start the unit	12
6.1. Connect in this order	12
7. Alarm displayed on cabinet door	13
8. NEO Product Sheet	14
8.1. NEO Battery backup with more alarm functions	14
8.1.1. Technical specifications	14
8.1.2. Product Identification	14
8.1.3. NEO battery backup for security installations	14
8.1.4. Flexibility	15
8.1.5. Area of use	15
8.1.6. Fixed installation	15
8.2. Regulations and certifications	15
8.2.1. Requirements that the product meets	15
8.3. Expected operating time in the event of a power failure (with new batteries)	15
8.4. Circuit boards - Technical data	16
8.4.1. Technical data: CEO 3	16
Control alarm limit with JU2	16
Control alarm limit	16
Fuses	16
8.5. Power supply	17
8.5.1. Power supply - Technical Data LRS-150-24	17
8.5.2. Power supply - Technical Data RSP-320-24	17
8.6. Technical data enclosures	18
8.6.1. Enclosures - Technical Data FLX M	18
8.7. Link to the latest information	18
8.8. Warranty, support, country of manufacture and country of origin	18
8.8.1. Warranty	18
8.8.2. Support	19
Spare parts	19
Support after the warranty period	19
Questions about product performance?	19
8.8.3. Contact us	19
8.8.4. Country of manufacture	19



8.8.5. Designed and produced by: Milleteknik AB	19
8.9. Batteries - recommended, not included	19
8.9.1. Batteries are not included they are sold separately	19
8.9.2. 20 Ah, 12 V AGM battery	19
9. Address and contact details	20

1. ABOUT NEO

NEO is normally used in security systems where the requirements are higher for more functions, alarm functions, longer backup operating times or when the battery backup is to handle higher loads.

1.1. About translation of this document

User manual and other documents are in the original language in Swedish. Other languages may be machine translated and/or not reviewed, errors may occur.



READ THIS FIRST!

If possible, leave 100 mm of free space.

The system is intended for use in a controlled indoor environment.

Only authorized persons should install and maintain the system.

It is the installer's responsibility to ensure that the system is suitable for its intended use.

Documents accompanying the system must be kept in or in its immediate vicinity.

Ventilation should not be covered. Mains voltage should be disconnected during installation.

All information subject to change.

Upon installation of this product, the installer acknowledges and accepts the limitations of this product as described in this manual.

Instructions original language: Swedish.





2. COMPONENT OVERVIEWS

2.1. Component overview

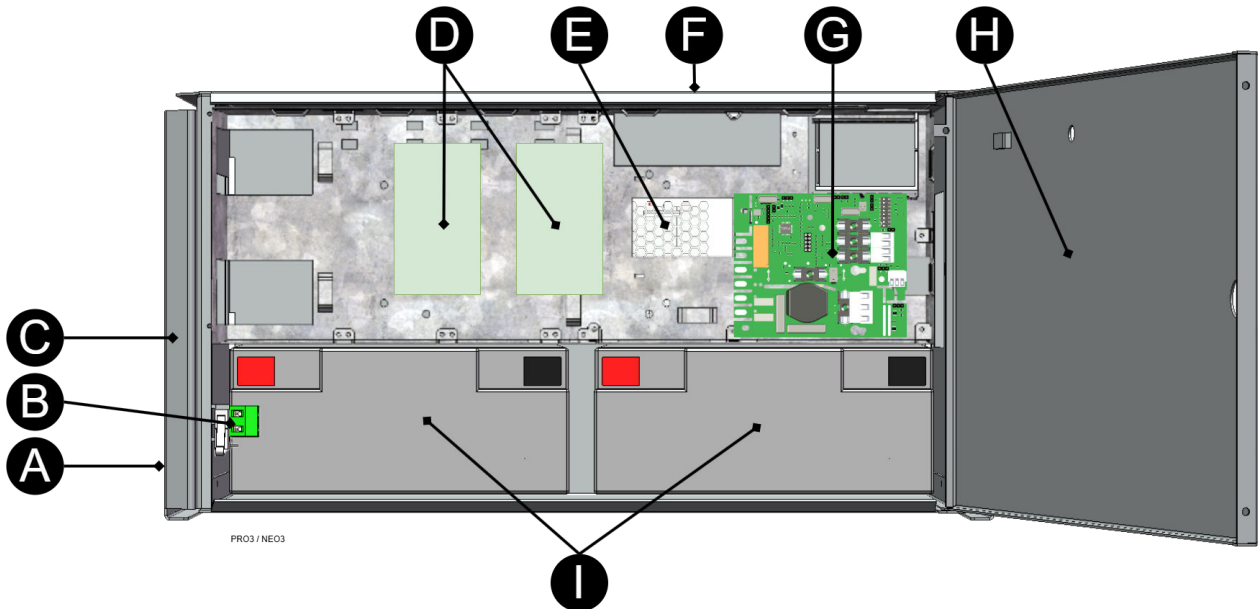


Table 1. Component overview

Letter	Explanation
B1 +, B2 +	Bracket, reversible for wall mounting or 19 "rack.
B	Optional: Tamper switch
C	Cabinet in powder-coated sheet metal.
D	Optional card slot
E	Power supply, sits on the back in some configurations.
F	Cable entries.
G	Motherboard.
H	Lockable door.
I	Space for batteries.

3. ENCLOSURES

3.1. General assembly instructions

3.1.1. Mounting - wall mounting

- Enclosure must be mounted vertically.
- For good ventilation, at least 100 mm of free space should be provided above and on the sides of the enclosure. Do not block the flow of air on the sides
- The device should be mounted at a comfortable working height, normally between 1.4 and 1.8 m.
- Recommended distance between screw head and wall should be 1.5-2 mm.



- Avoid placement in direct sunlight, near heat sources, or in environments with high humidity or dust.
- Installation shall be carried out in accordance with the applicable installation rules and by a competent installer.

3.1.2. Indoor mounting in 19" rack

- The product should be mounted in a standardized 19" rack or cabinet with sufficient carrying capacity for the weight of the enclosure including batteries.
- The device should be mounted at a comfortable working height, normally between 1.4 and 1.8 m.
- The device is mounted horizontally in the rack with the included rack ears or corresponding brackets.
- Check that the rack posts are properly aligned and that the spacing corresponds to the 19" standard (465—470 mm between the inner edge of the posts).
- Use at least two mounting points (on each side) on the rack ears for stable attachment. Recommended screw size is M5 or M6
- When assembling, cage nuts or locking washers should be used to ensure that the screws fit securely.
- For good ventilation, at least 100 mm of free space should be provided above and below the unit. Do not block the air flow on the front or back.
- Batteries should always be placed as directed and must not block ventilation openings or wiring.
- Installation shall be carried out in accordance with the applicable installation rules and by a competent installer.

3.2. Mounting

Use the appropriate screw for mounting on a wall or in a 19" rack. Screws for mounting on a wall or in a rack are not included.

For wall mounting in concrete, concrete screws must be used. For rack mounting, M6 with basket nut is used

Screw length should be adjusted according to wall material and load. The specified screw length is the minimum allowable length

Table 2. Screw when mounting

Kaspling	Number	Screw ^a .
FLX M	4	Concrete screw 5,0×40 mm

^aScrew for mounting is not included.

3.3. Bracket

The supplied brackets can be attached in two ways: When mounting on a wall, the brackets must sit backwards, against the wall. When mounting in a 19" rack, the bracket must sit at the front of the unit.

Table 3. Bracket

Letter	Explanation
A	Bracket is pushed in from the bottom up.
B	Clip clicks in when bracket is pushed in correctly.





4. BATTERIES - PLACEMENT AND CONNECTION


4.1. Connection of batteries in FLX S, FLX M and FLX L

Battery wiring is mounted on the circuit board upon delivery. Pictures below only show how to connect wiring.

1. Place the batteries in the cabinet with the battery terminals facing outwards.
2. Connect the battery cable. Red cable on + and black cable on -.
3. Plug in battery fuse.

- If possible, disconnect mains voltage when replacing the battery.

Figure 1. Wiring diagram for batteries in battery backup

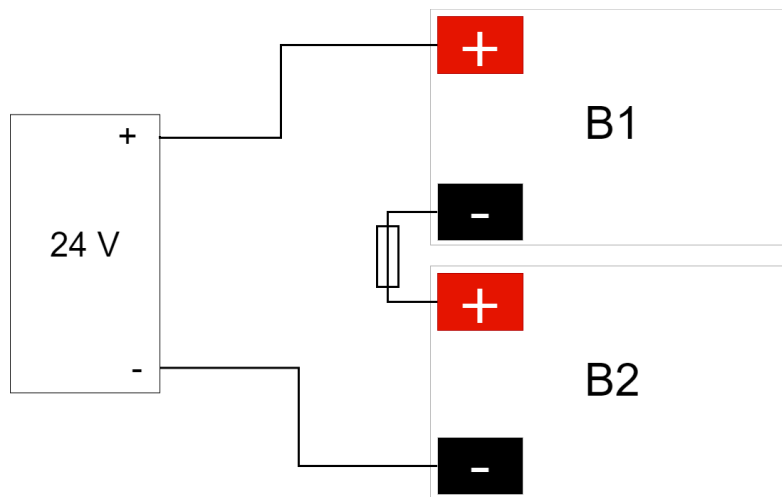

Connect the terminals correctly so that you do not damage the equipment.


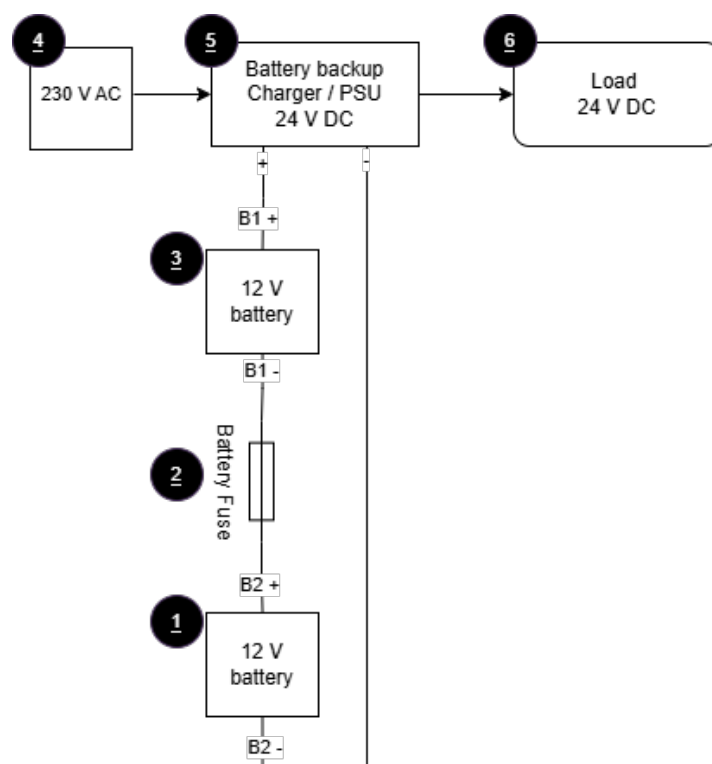


Table 4. Electrical scheme

No.	Explanation
1	Battery 2.
2	Battery fuse.
3	Battery 1.
4	Incoming mains voltage, 230 V AC.
5	Rectifier 24 V DC.
6	Load, 24 V DC.

4.2. Connect battery fuse / blade fuse

Figure 2. Fuse holders with blade fuses are connected to + and minus on batteries

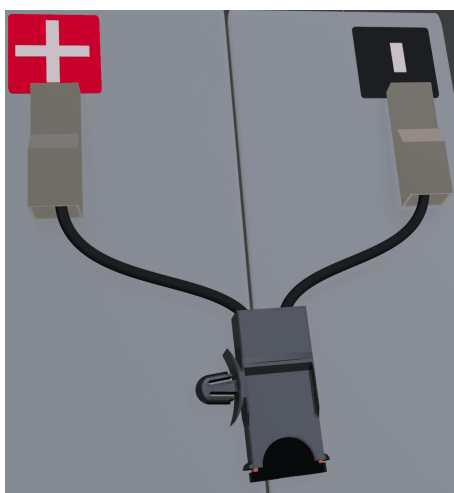



5. MOTHERBOARD DESCRIPTION

5.1. Connect in this order

To minimize the risk of short-circuit errors, connect the components to the motherboard in the following order.


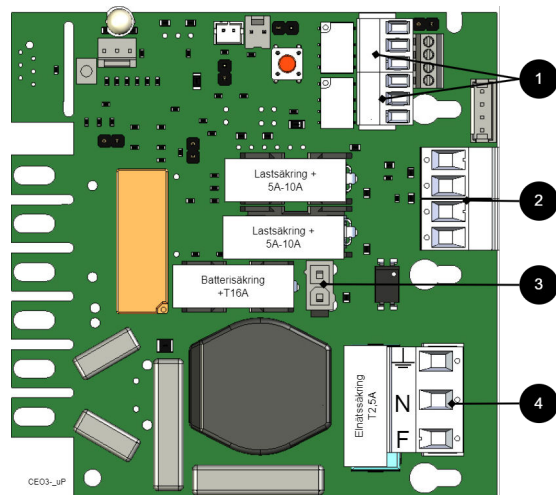


Table 5. Connect in this order

Nr	Explanation
1	Connect alarm.
2	Connect load.
3	Connect batteries
4	Connect mains.

Figure 3. Description: CEO3 uP

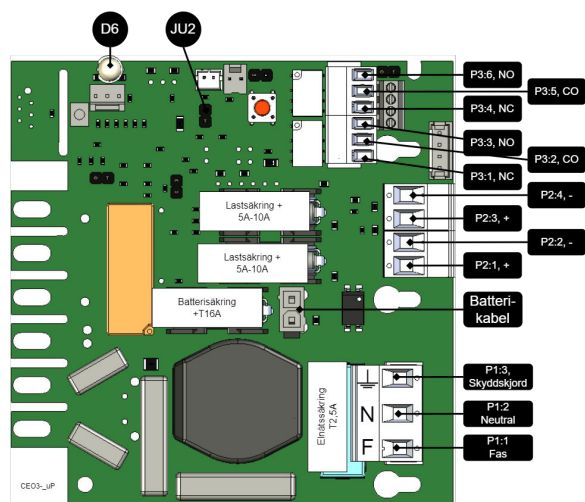

On PCB	Explanation
D6	Indicator diode.
JU2	Jumper for alarm control. When the jumper is mounted, the alarm limit is lowered.



On PCB	Explanation
P1:1-3	Mains connection, F, N, PE.
P2:1-2	Load output, + / -.
P2:3-4	Load output, + / -.
P3:1-3	Alarm output, NC, CO, NO.
P3:4-6	Alarm output, NC, CO, NO.

5.2. Connect alarm on P3

Alarm is connected to terminal P3

Table 6. Connect alarm P3

P3:1-6	Explanation
Sum alarm	
P3:1	NC
P3:2	CO
P3:3	NO
Sum-alarm*	
P3:4	NC
P3:5	CO
P3:6	NO

Total alarm: Broken fuse on load, broken fuse from external distribution board, broken battery fuse, low battery voltage in battery operation, batteries not connected, overvoltage.

5.3. Connect load

 


Table 7. Load connections

Circuit board number	Explanation
P2: 1	Connection for load 1 +
P2: 2	Connection for load 1 -
P2: 3	Connection for load 2 +.
P2: 4	Connection for load 2 -.



MAX CURRENT

The maximum current must not be exceeded. Max current is indicated on the rating plate on the device.



DANGER

Mains voltage must be disconnected when working with stripped cables. It is the installer's responsibility to ensure that the correct skills are available for connecting 230 V to the unit. Maximum cable area is 4 mm²



5.4. Connect mains

Before connecting, the supply circuit should be disconnected and voltage-free. Verify that the conductor area and cable type meet the applicable installation rules and that the strain relief and insulation levels comply with the requirements for 230 V AC

After connection, all screw connections should be checked and tightened. Tensioning shall only take place after mechanical protection, caps and housing have been reassembled and comply with the contact protection according to EN 62368-1

Secure F and N with cable ties.



IMPORTANT


Protective earth (PE) must be connected to the PE terminal on the motherboard. The motherboard is grounded via its mounting points in the enclosure, ensuring proper potential equalization between PCB and enclosure. Also the cover is grounded through ground cable/earth braid between cover and enclosure to maintain continuity and EMC

Mains wiring must be kept separate from other wiring to avoid EMC interference.

The protective earth (PE) must be connected to the PE terminal on the motherboard. The motherboard is grounded via its mounting points in the enclosure, ensuring correct equipotential bonding between the circuit board and the enclosure. The cover is also grounded via a grounding cable / grounding braid between the cover and the enclosure to maintain continuity and EMC function.

Check that the marking on the circuit board matches the wiring order on the terminal block.

Figure 4. Mains connection is made to the terminal block on the motherboard.

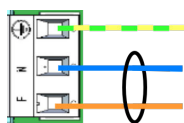

Connect the mains cable to the terminal block before it is re-inserted into the motherboard. Secure L (F in picture) and N with cable ties for electrical safety.

Table 8. Electrical network connections

Letter	Explanation
L	Fas
N	Neutral
PE	

5.5. Control alarm limit

Alarm for low battery voltage in battery operation can be controlled.



Table 9. Low battery voltage alarm limit

Low battery voltage alarm limit	JU2 with jumper ^a .	JU2 without jumper
24 V	24.0V	26.5V

^aThe unit is delivered with jumper on JU2

5.6. Fuses

Table 10. Fuses.

Unit	Fuse	Type	Explanation
All units	F1	T2,5A	Mains fuse
	F2, F6	T5A	Load fuse +
All units	F7	T16A	Battery fuse



WARNING FOR REPLACING FUSES (CURRENT STRENGTH, A)

There is a risk of damage if the fuse is changed to a larger one than what the unit is delivered with. The function of the fuse is to protect the connected load and cables against damage and fire. It is not possible to change the fuse to a larger one to increase the power output.

6. COMMISSIONING - HOW TO START THE UNIT

6.1. Connect in this order

To minimize the risk of short-circuit errors, connect the components to the motherboard in the following order.

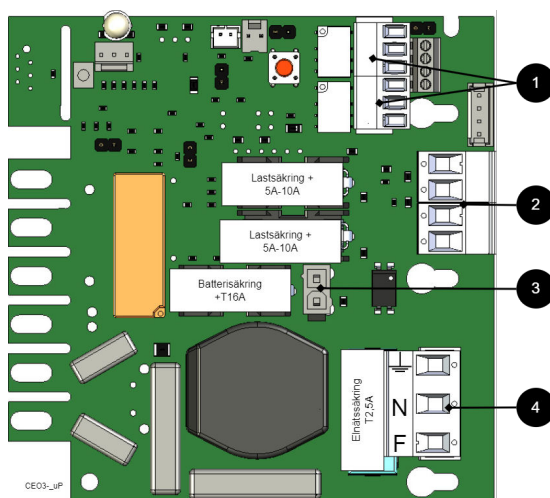




Table 11. Connect in this order

Nr	Explanation
1	Connect alarm.
2	Connect load.
3	Connect batteries
4	Connect mains.

The unit works normally when the indicator LED on the outside of the cabinet door lights up with a solid green light. See front panel for other status indications.

It may take up to 72 hours for the batteries to be fully charged.

7. ALARM DISPLAYED ON CABINET DOOR

In normal mode, the indicator LED shows a solid green light.



Table 12. The indicator diode shows.

The indicator diode (LED) shows	Explanation
Solid green light	Normal operation.
Slow green flashes	Not available for NEO.
Fast green flashes	Not available for NEO.
Solid amber light	Mains failure.
Slow amber flashes	Not available for NEO.
Rapid amber flashes	Not available for NEO.
Solid red light	Fuse error / charger fault / batteries not connected.
Slow red flashes	Not available for NEO.
Rapid red flashes	Not available for NEO.
No light / off	Deep discharge protection is activated. (System shutdown).

When operating system: If the indicator LED is off, deep discharge protection has been activated.



NOTICE

If the indicator light flashes every 15 seconds, the battery is fully charged and the charge is in rest phase to extend battery life. In the event of a power failure during the rest phase, the battery backup switches to battery operation as usual

8. NEO PRODUCT SHEET

8.1. NEO Battery backup with more alarm functions

Figure 5. NEO FLX M



NEO FLX M is mounted on a wall or in a 19" rack.

8.1.1. Technical specifications

These technical specifications are subject to change without notice.

8.1.2. Product Identification

Table 13. Product designation, Part Number and E-Number

Product designation	Article number	E-number (SE)
NEO 24V 5A FLX M	FM01N10224P050	52 136 94

8.1.3. NEO battery backup for security installations

NEO is normally used in facilities where the requirements are higher regarding greater flexibility, more alarm functions, longer backup operating times or when the battery backup needs to handle higher loads. The NEO series offers controlled charging (intelligent charging), which means that when the batteries are fully charged, they will be electronically disconnected for standby mode for up to 20 days or when the batteries have reached 26.7 V (24 V). By discharging the batteries and recharging them continuously (instead of never using them), the system extends the life of the battery by up to 50%. The batteries automatically connect in less than 50 microseconds when needed.

- Battery backup with more alarm functions
- Controlled charging
- Can be supplemented with several optional cards
- Can be used with battery box





8.1.4. Flexibility

NEO FLX S can have an extra battery box. NEO FLX M and NEO FLX L with 1-4 extra battery boxes. NEO FLX M and NEO FLX L with battery shelves in 19 "rack *. * The battery boxes and shelves are connected via a 9-pin connector. The battery box has room for up to 2 pcs. 45 Ah batteries per battery box. Battery shelves have room for 2 pcs. 45 Ah batteries (Medium) and up to 2 pcs. 150 Ah batteries (Large) per each battery shelf.

8.1.5. Area of use

NEO supplies power to access systems, alarm systems or other security products in a building that are powered by 24 V DC. The rectifier in the power supply converts 230 V AC down to 24 V DC. Batteries, for example the access system, continue when the power grid goes down. Long life, energy efficient and support is available if something goes wrong, now or in 10 years.

8.1.6. Fixed installation

The product is intended for fixed installation. The battery backup must be installed by a qualified installer.

8.2. Regulations and certifications

8.2.1. Requirements that the product meets

Table 14. The product meets the following requirements.

EMC:	EMC Directive 2014/30/EU
Electricity:	Low Voltage Directive 2014/35/EU
CE marking:	Regulation (EC) No 765/2008
Machinery Directive	The product is part of electrical systems, is subject to the relevant electrical and safety directives and is not a machine according to the Machinery Directive (2006/42/EC).
Ecodesign	Milleteknik's products are intended for professional use and are therefore not directly covered by the Ecodesign Regulation (EU 2019/1782). As some components may be covered, we nevertheless disclose relevant information to give our customers confidence in their choice

Denomination	Efficiency (%) ^a	Standby consumption, typical (W):
--------------	-----------------------------	-----------------------------------

^aAt rated load.



8.3. Expected operating time in the event of a power failure (with new batteries)

System voltage	Number of batteries	Battery type	Unit + battery box *	Load: 2 A	Load: 4 A	Load: 8 A	Load: 10 A	Load: 14 A	Load: 18 A
24 V	2 pcs	20 Ah	1+0	9 h	3.5 h	1.5 h	1 h	30 min.	20 min.
24 V	2 pcs	45 Ah	1+1	21 h	12 h	4 h	3 h	2 h	1.5 h
24 V	4 pcs	45 Ah (90 Ah)	1+2	42 h	20 h	12 h	8 h	5 h	3.5 h



System voltage	Number of batteries	Battery type	Unit + battery box *	Load: 2 A	Load: 4 A	Load: 8 A	Load: 10 A	Load: 14 A	Load: 18 A
24 V	6 pcs	45 Ah (135 Ah)	1+3	64 h	30 h	15 h	12 h	9 h	6 h
24 V	8 pcs	45 Ah (180 Ah)	1+4	82 h	42 h	20 h	16 h	12 h	10 h

* Example: 1 + 2 means that there is 1 battery backup with 2 battery boxes connected. 1 + 0 means that it is a battery backup without a battery box.

8.4. Circuit boards - Technical data

8.4.1. Technical data: CEO 3

Table 15. CEO3-ECO

Info	Explanation
Article name	CEO3-ECO
Product description	CEO 3 is the next generation circuit board for simpler battery backups. Advanced functions that were not previously possible in simpler battery backups are now available as standard. CEO 3 is manufactured with fewer components than before, which reduces the environmental impact.
Measure	120 x 55 mm x 52 mm
Own consumption	50 mA
Fuses	See table: Fuses.
Outputs	Output: two load outputs.
Insurance	Load output: + secured.
Max load	Maximum load is 10 A per load output (T2A is mounted from the factory) and the card's total load must not exceed 16 A.
Alarm outputs	Alarm outputs: Sum alarm in case of fuse fault, see indication below. Alarm on potential-free relay contact.
Alarm	Sum alarm, Mains failure, fuse failure, charger failure, batteries not connected.
Alarm via	Triggered load securing, potential-free shifting, CO / NO.
Indication	Display showing operating status, alarms and faults. Operating indication: one indication diode per load output +/- . Solid green light = normal operation.

CONTROL ALARM LIMIT WITH JU2

CONTROL ALARM LIMIT

Alarm for low battery voltage in battery operation can be controlled.

Table 16. Low battery voltage alarm limit

Low battery voltage alarm limit	JU2 with jumper ^a .	JU2 without jumper
24 V	24.0V	26.5V

^aThe unit is delivered with jumper on JU2

FUSES

Table 17. Fuses.

Unit	Fuse	Type	Explanation
All units	F1	T2,5A	Mains fuse
	F2, F6	T5A	Load fuse +
All units	F7	T16A	Battery fuse



WARNING FOR REPLACING FUSES (CURRENT STRENGTH, A)

There is a risk of damage if the fuse is changed to a larger one than what the unit is delivered with. The function of the fuse is to protect the connected load and cables against damage and fire. It is not possible to change the fuse to a larger one to increase the power output.

8.5. Power supply

8.5.1. Power supply - Technical Data LRS-150-24

In:
NEO 24V 5A FLX M

Info	Explanation
Output voltage	27.3 V
Output current:	0 A - 6.5 A
Output voltage, ripple	200 mVp-p
Overvoltage	28.8 V - 33.6 V
Voltage recharge, ripple / current limitation	Less than 0.6 Vp-p
Efficiency	89%
Current limitation	110% - 140%
Constant voltage	+/- 0.5%
Regulatory accuracy	+ / - 1.0%
Input current (230 V)	1,7 A
Mains voltage frequency	47 Hz- 63 Hz
Mains voltage	230 V AC - 240 V AC
Brand effect	156 W
Temperature range	-30°C - +70°C
Humidity range	20% - 90% RH non-condensed
The power supply is adapted and calibrated with the battery / hardware of the battery backup. Only power and calibrated power supplies may be used. Contact support when changing power supplies. Use of power supplies coming from another source may cause damage not covered by the warranty. Warranty is canceled if power supplies (from a source other than support / designated by support) that are not correctly calibrated are used.	

8.5.2. Power supply - Technical Data RSP-320-24

In:

Info	Explanation
Output voltage	27.3 V
Output current	0 A - 13.4 A
Output voltage, ripple	150 mVp-p
Overvoltage	27.6 V - 32.4 V
Voltage recharge, ripple / current limitation	Less than 1.2 Vp-p
Efficiency	89%
Current limitation	105% - 135%
Constant voltage	+/- 0.5%



Info	Explanation
Regulatory accuracy	+/- 1.0%
Input current (230 V)	2 A
Mains voltage frequency	47 Hz- 63 Hz
Mains voltage	230 V AC - 240 V AC
Brand effect	321.6 W
Temperature range	-30°C - +70°C
Humidity range	20% - 90% RH non-condensed
The power supply is adapted and calibrated with the battery / hardware of the battery backup. Only power and calibrated power supplies may be used. Contact support when changing power supplies. Use of power supplies coming from another source may cause damage not covered by the warranty. Warranty is canceled if power supplies (from a source other than support / designated by support) that are not correctly calibrated are used.	

8.6. Technical data enclosures

8.6.1. Enclosures - Technical Data FLX M

Info	Explanation
Name	FLX M
Enclosure class	IP 32
Measure	Height: 224 mm, width 438 mm, depth 212 mm
Height units	5 HE
Mounting	Wall or 19 "rack
Ambient temperature	+ 5 ° C - + 40 ° C. For best battery life: + 15 ° C to + 25 ° C.
Environment	Environmental class 1, indoors. 20% ~ 90% relative humidity
Material	Powder coated sheet
Color	Black
Cable entries, number	4
Batteries that fit	2 pieces 12 V, 20 Ah.

8.7. Link to the latest information

Products and software are subject to updates, you will always find the latest information on our website.

[NEO](#)

8.8. Warranty, support, country of manufacture and country of origin

8.8.1. Warranty

The product has a two-year warranty, from the date of purchase (unless otherwise agreed). Support during the warranty period can be reached at support@milleteknik.se or telephone, +46 31-34 00 230. Compensation for travel and / or working hours in connection with locating faults, installing repaired or replaced goods is not included in the warranty. Contact Milleteknik for more information. Milleteknik provides support during the product's lifetime, however, no later than 10 years after the date of purchase. Switching to an equivalent product may occur if Milleteknik deems that repair is not possible. Support costs may (at Milleteknik's discretion) occur after the warranty period has expired.



8.8.2. Support

Do you need help with installation or connection?

You will find answers to many questions at: www.milleteknik.se/support

Phone: +46 31-340 02 30

Support is open: Monday-Thursday 08:00-16:00, Fridays 08:00-15:00. Closed 11:30-13:15.

SPARE PARTS

Contacted support for questions about spare parts.

SUPPORT AFTER THE WARRANTY PERIOD

Milleteknik provides support during the life of the product, but no longer than 10 years after the date of purchase. Replacement for an equivalent product may occur if the manufacturer deems that repair is not possible. Costs for support and replacement are added after the warranty period has expired.

QUESTIONS ABOUT PRODUCT PERFORMANCE?

Contact sales: 46 31-340 02 30, e-mail: sales@milleteknik.se

8.8.3. Contact us

Milleteknik AB

Ögärdesvägen 8 B

S-433 30 Partille

Sweden

+46 31-34 00 230

www.milleteknik.se

8.8.4. Country of manufacture

Country of manufacture / country of origin is Sweden. For more information, contact your seller.

8.8.5. Designed and produced by: Milleteknik AB

Designed and produced by Milleteknik AB

8.9. Batteries - recommended, not included

8.9.1. Batteries are not included they are sold separately

Batteries are sold separately.

8.9.2. 20 Ah, 12 V AGM battery

Fits in	Number of batteries
NEO 24V 5A FLX M	2



Battery type	V	Ah
Maintenance-free AGM, lead-acid battery.	12 V	20 Ah

Table 18. 10+ Design life * battery

Article number	E-number	Article name	Terminal	Measure. Height width depth	Weight per piece	Make
MT113-12V20-01	5230538	UPLUS 12V 20Ah 10+ Design Life battery	M5 Bult	182x77x168 mm	6.0 kg	UPLUS

*Design life is the shelf life in years for an unused battery. Environmental factors such as heat and load affect the service life. Batteries that have a durability (+10 Design Life) of 10+ years usually need to be replaced after 5-6 years.

9. ADDRESS AND CONTACT DETAILS

Milleteknik AB
Ögärdesvägen 8 B
S-433 30 Partille
Sweden
+46 31 340 02 30
info@milleteknik.se
www.milleteknik.com

