



ECO Mini

Battery backup

350-266
Publication date 2024-04-02
ECO Mini3



Table of Contents

1. About	3
1.1. Name, article number and e-number	3
1.2. Enclosures	3
1.2.1. Mounting	3
1.2.2. Wall mounting	3
2. Component overviews	4
2.1. Component overview ECO 24V 1A S	4
3. Technical data: CEO 3	5
3.1. Connect batteries ECO Mini	5
4. About this information	6
5. About translation of this document	6

1. ABOUT

ECO 24V 1A Mini is a flexible battery backup for use in controlling loads that require a simple and reliable battery backup. Two 1.2 Ah batteries are included.¹

1.1. Name, article number and e-number

Name	Article number	E-number (SV)
ECO 24V 1A Mini	MI01C10324P010B01	52 137 46

1.2. Enclosures


1.2.1. Mounting

Use the appropriate screw for mounting on the wall, Screw for mounting on the wall is not included.

1.2.2. Wall mounting

Distance between screw head and wall should be 1.5–2 mm. Preferably leave a 100 mm air gap around the unit.

¹Batteries are not covered by the product's warranty.

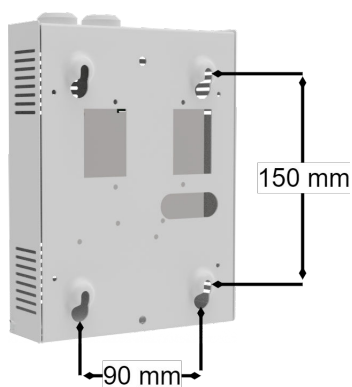

2. COMPONENT OVERVIEWS

2.1. Component overview ECO 24V 1A S

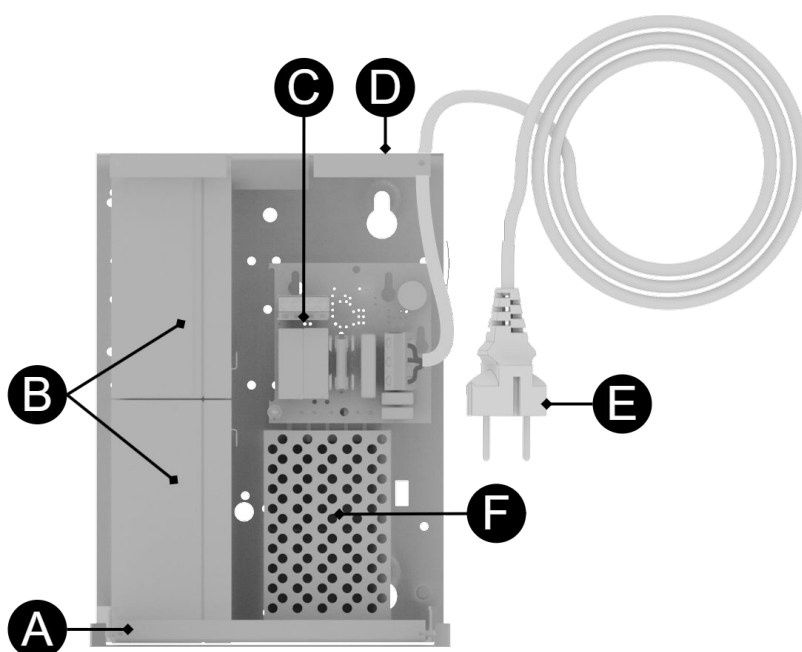


Table 1. Component overview

Letter	Explanation
A	Cabinet in powder-coated sheet metal.
B	Batteries.
C	Motherboard.
D	Cable entries.
E	230 V cable with plug.
F	Power supply.





3. TECHNICAL DATA: CEO 3

Figure 1. ECO Mini3

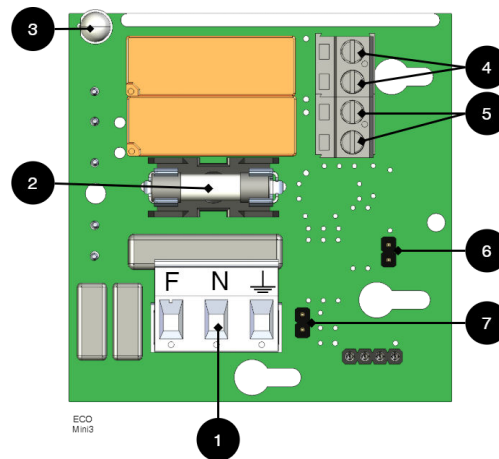


Table 2. Connections

Nr	In short	Explanation
1	P1: 1-3	Connection to mains, 230 V.
2	F6	Load securing: T2A.
3	D1	Indicator diode, see table below.
4	P2: 3-4	Connect remote control of load output. Shipped assembled with jumper. If the jumper is removed, the load output, see 5 below, is switched off (becomes de-energized)
5	P2: 1-2	Connect load.
6	JU2	JU2 with jumper = 24.0 V. JU 2 without jumper = 26.5 V. The unit is delivered without jumper on JU2.
7	JU1	JU1 with jumper = alarm on buzzer. The unit is delivered with jumper on JU1. The device is delivered without a buzzer. JU1 without jumper = No alarm on buzzer.

Table 3. Indications and alarms

Nr	In short	Indicator diode	Buzzer	Explanation
3	D1	Green	No	OK - normal operation.
		Yellow / orange	Yes if JU1 has a jumper.	Power failure / low battery voltage. Controlled via jumper on JU2.
		RED	Yes if JU1 has a jumper.	Triggered load securing

3.1. Connect batteries ECO Mini

The unit comes with batteries.

Attach battery fuse between batteries.



4. ABOUT THIS INFORMATION

All information is published subject to possible errors. This document is updated without notice.

5. ABOUT TRANSLATION OF THIS DOCUMENT

User manual and other documents are in the original language in Swedish. Other languages may be machine translated and/or not reviewed, errors may occur.



This page is intentionally left blank.

This page is intentionally left blank.