



FLX M Cassette For Sentrion S4

52 137 15

350-263

Publication date 2023-11-29



Table of Contents


1. If	3
2. Product image	3
3. Name, article number and e-number	4
4. What comes with it?	5
5. Overview configurations	6
6. Install the supplied components	8
7. Enclosures	9
7.1. Bracket	9
7.2. Mounting on a wall or in a 19 "rack	9
7.3. Mounting	10
8. Product sheet - power supply / battery backup	10
8.1. Product sheet - power supply from Milletechnik	10
8.1.1. Name, article number and e-number	10
8.1.2. Product image	10
8.1.3. Designation	11
8.1.4. Area of use	11
8.1.5. Technical description	11
8.1.6. Weight	11
8.1.7. Installation requirements	11
8.1.8. Requirements that the product meets	11
8.1.9. Limitations	12
8.1.10. Guarantee	12
8.1.11. Manufacturing, lifespan, environmental impact and recycling	12
8.1.12. Link to the latest information	12
8.1.13. About this information	12

1. IF

FLX M housing with insert for accessories for Sentrion S4.

2. PRODUCT IMAGE



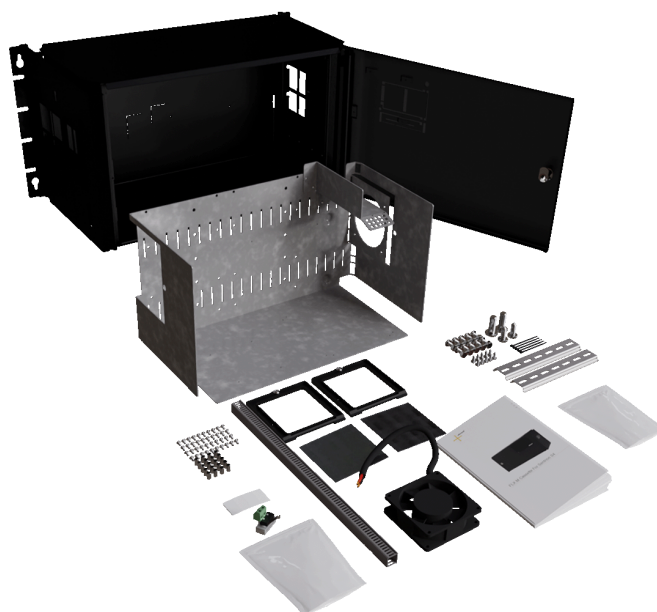


3. NAME, ARTICLE NUMBER AND E-NUMBER

Name	Item number	E-number (sv)
FLX M Cassette for Sentrion S4	FM01000000FLX01	52 137 15





4. WHAT COMES WITH IT?

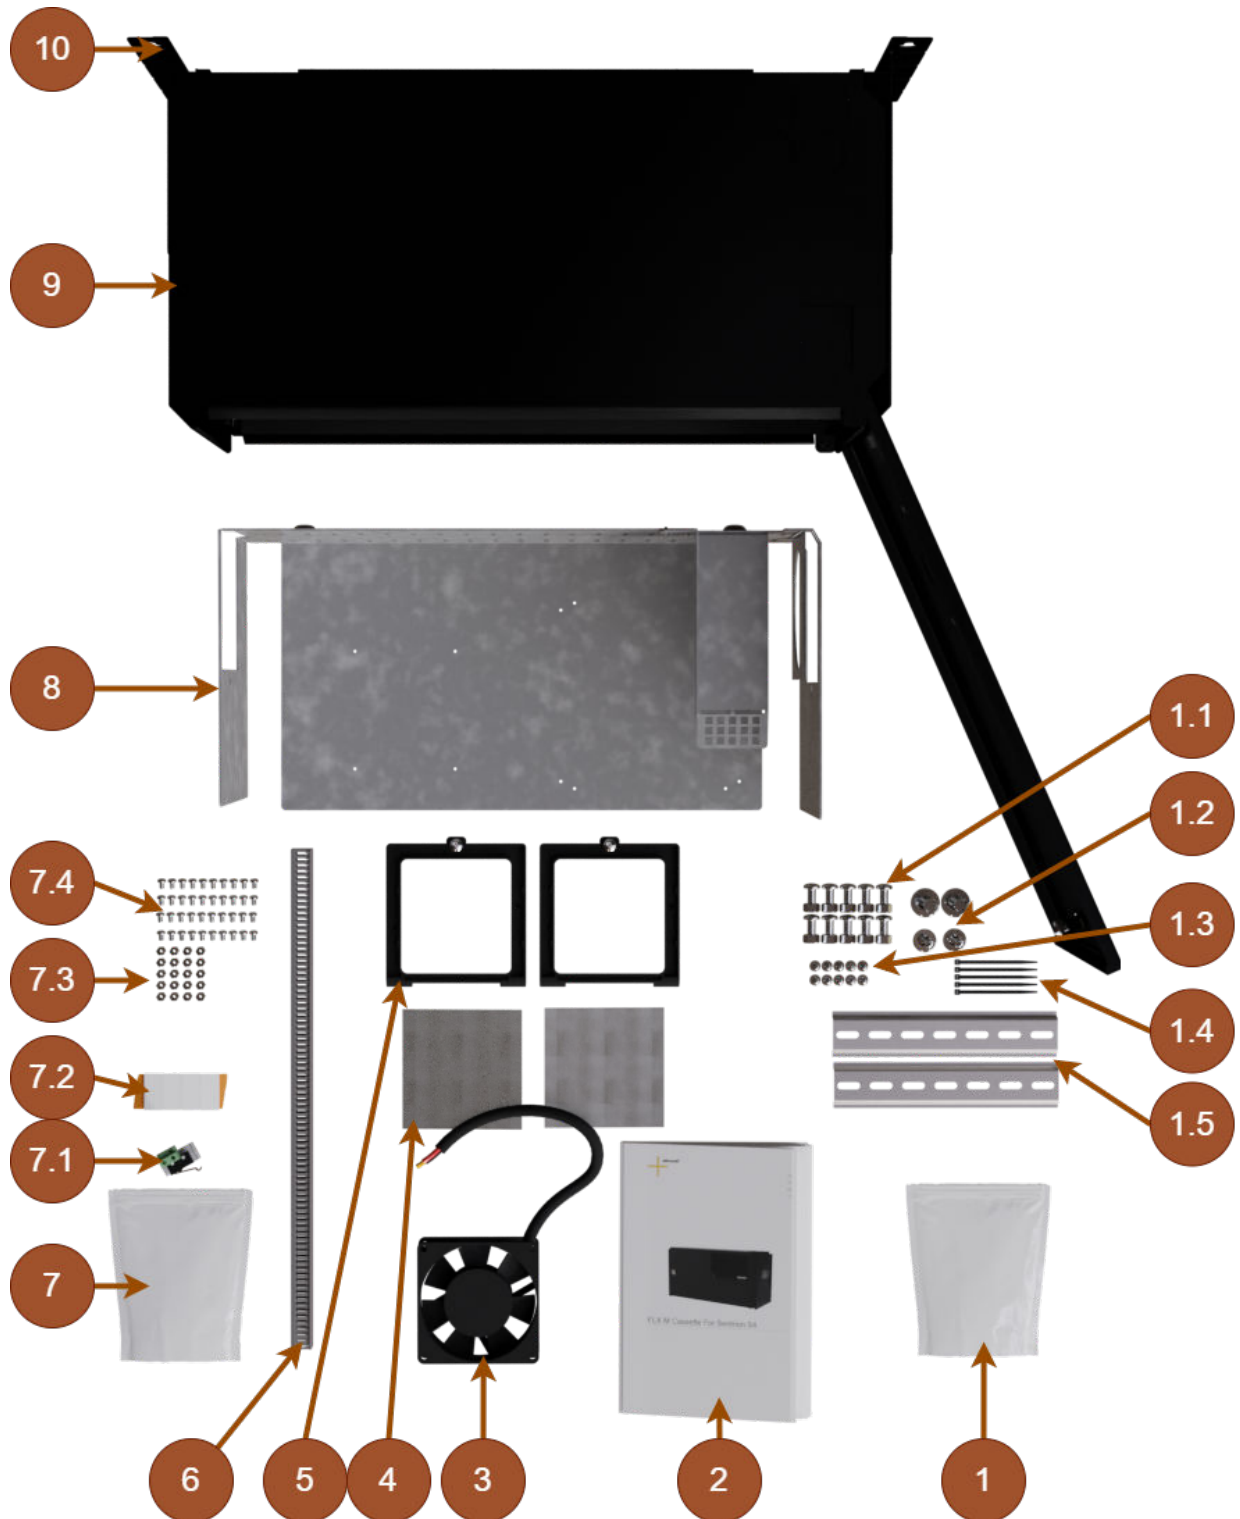

No	Explanation
1	Pouch.
1.1	10 pieces of screw, M5x6 and lock nut, M5.





No	Explanation
1.2	Two screws, M5x16 and two screws, M5x6.
1.3	Ten screw, 2.9 mm.
1.4	Five cable ties, 9 mm.
1.5	Two DIN rails, 190 mm.
2	User manual in Swedish.
3	Fan, 24 V.
4	Ventilation grille.
5	Holder for ventilation grilles.
6	Cable channel, 400 mm.
7	Pouch.
7.1	Tamper switch, 12 V or 24 V.
7.2	Four attachment pads.
7.3	20 spacers, M3, 10 mm.
7.4	40 pieces TT screw M3x6.
8	Plate insert.
9	FLX M tin box.
10	Bracket for wall or 19" rack.

5. OVERVIEW CONFIGURATIONS

Figure 1. Configuration 1

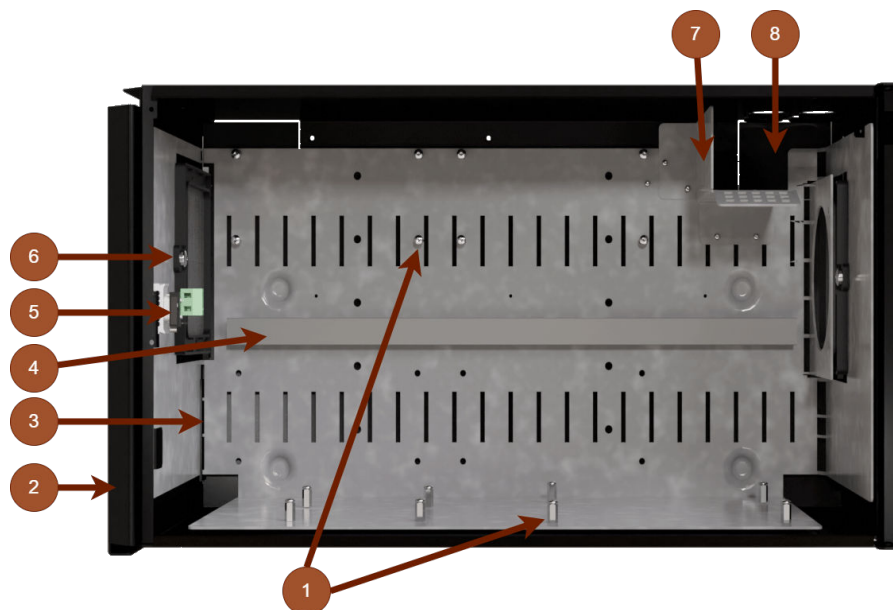


Image of how components can be assembled.





Figure 2. Configuration 2

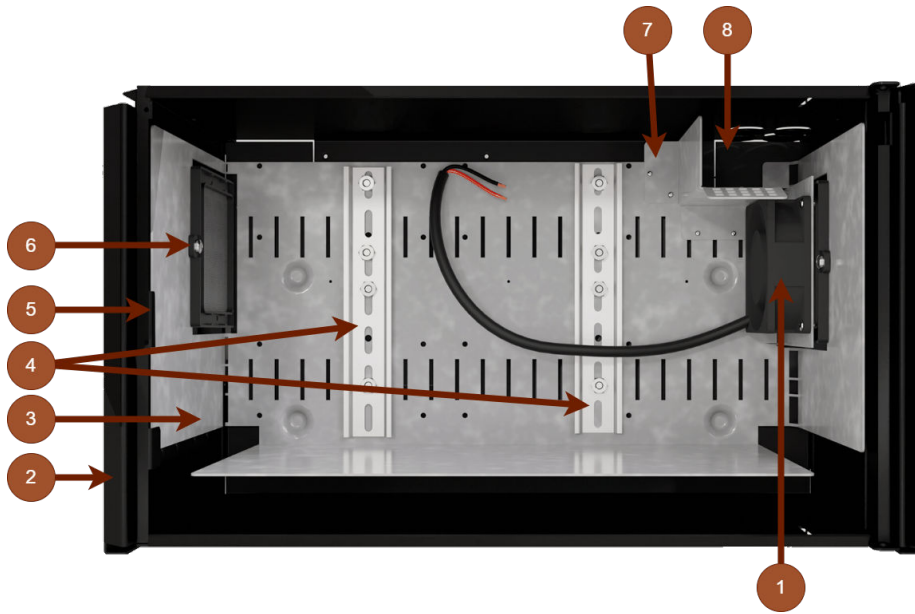



Image of how components can be assembled.

No	Explanation Both configurations	Explanation configuration 1	Explanation configuration 2
1	-	Distances.	Fan.
2	Enclosure.		
3	Cassette plate.		
4	-	Cable channel.	DIN rails.
5	Tamper contact, place for.		
6	Ventilation grille.		
7	Sheet metal cable channel.		
8	Cable entries.		




6. INSTALL THE SUPPLIED COMPONENTS

Figure 3. Mount configuration 1

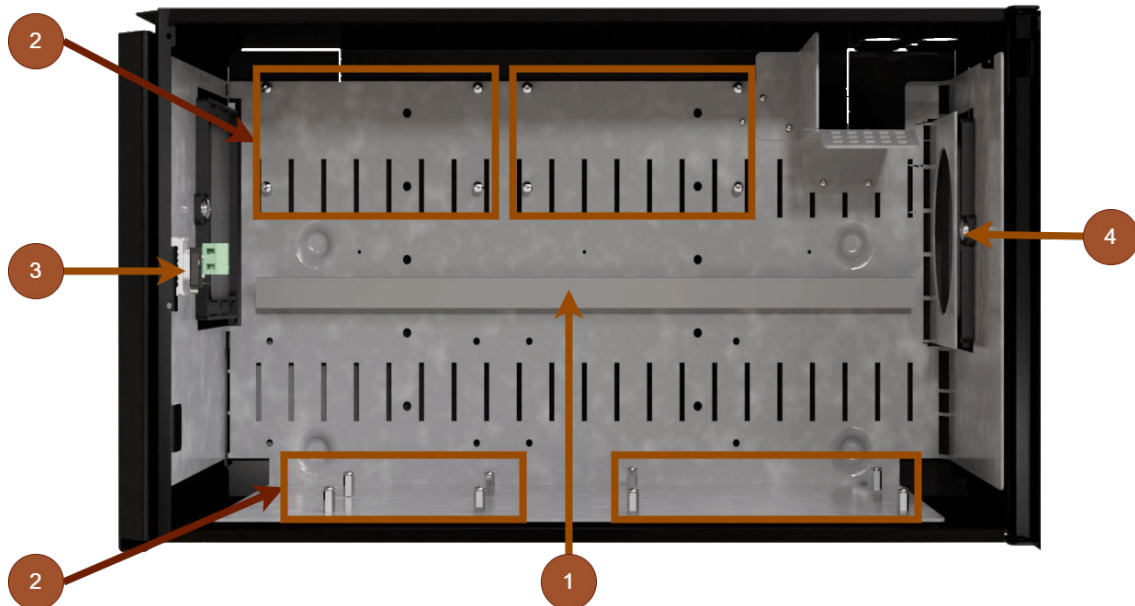

No	Explanation
1	Cable channel is screwed into sheet metal.
2	Mount spacers and screw on plate. Distances are screwed from both sides. Use two screws per spacer.
3	The tamper contact is pressed onto a sheet tongue in the enclosure.
4	Ventilation grilles are placed in holders and screwed into sheet metal.

Figure 4. Mount configuration 1

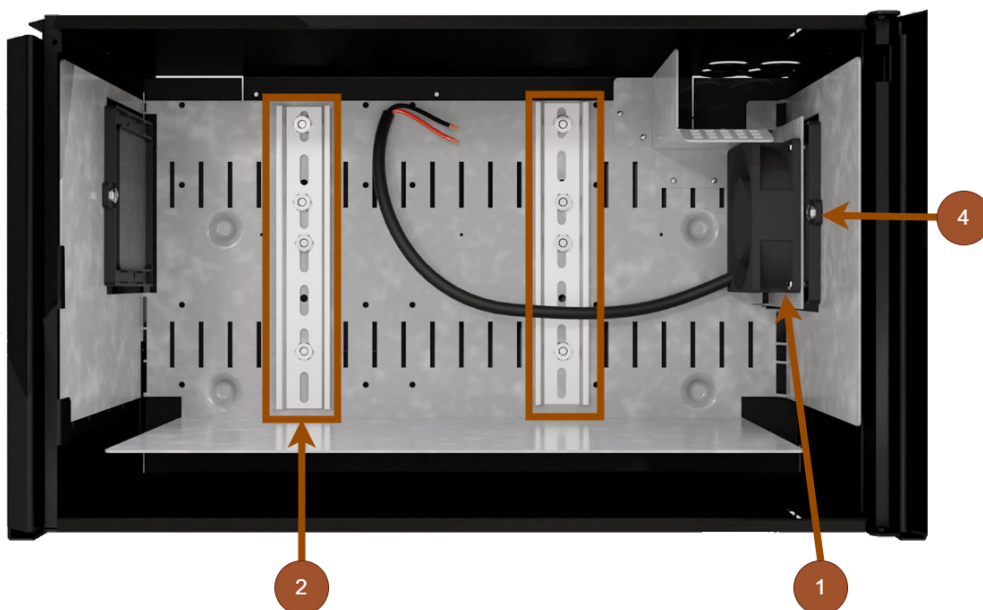




No	Explanation
1	Fan is screwed with four sheet metal screws.
2	Mount DIN rails with four screws and nuts in each DIN rail.
3	-
4	Ventilation grilles are placed in holders and screwed into sheet metal.

7. ENCLOSURES

7.1. Bracket

Brackets are used so that the unit can be mounted on a wall or in a 19 "rack.

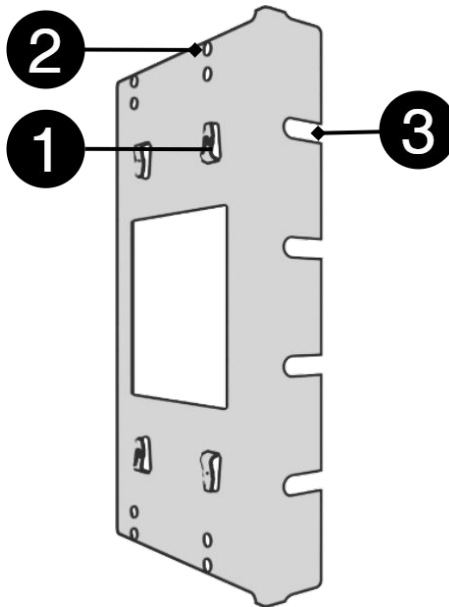

Nr	Explanation
1	Clip in bracket that secures the bracket to the housing.
2	Holes for screws - can be used to secure the bracket in the housing.
3	The brackets is screwed to a wall or 19 "rack.


7.2. Mounting on a wall or in a 19 "rack

The unit can be mounted in a 19 "rack or on a wall. The included brackets can be attached in two ways: When mounting on a wall, the brackets must sit backwards, against the wall. When mounting in a 19 "rack, the console must be at the front edge of the unit.





Figure 5. FLX M - mount brackets

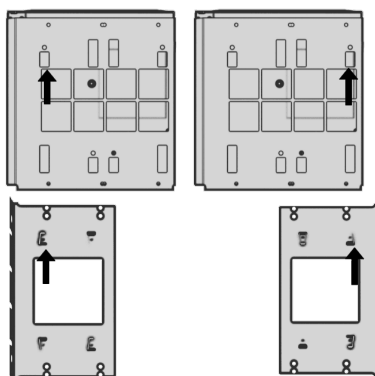

Left bracket facing the front for mounting in a 19" rack.

Right bracket facing the back for wall mounting.



IMPORTANT

Leave 100 mm free around the air vents.

7.3. Mounting

Use the appropriate screw for mounting on a wall or in a 19" rack. Screws for mounting on a wall or in a rack are not included.

8. PRODUCT SHEET - POWER SUPPLY / BATTERY BACKUP


8.1. Product sheet - power supply from Milleteknik

8.1.1. Name, article number and e-number

Name	Item number	E-number (sv)
FLX M Cassette for Sentrion S4	FM01000000FLX01	52 137 15

8.1.2. Product image



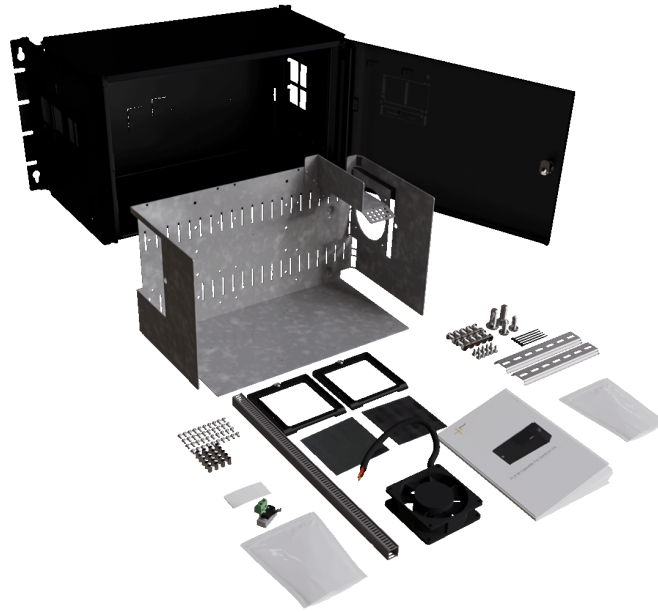

8.1.3. Designation

Accessory box for Sentrion S4

8.1.4. Area of use

To install accessories for the Sentrion S4 in its own enclosure.

8.1.5. Technical description

Box with insert for attaching accessories to DIN rail or insert.

8.1.6. Weight

Name	Net weight	Weight incl. packaging
FLX M Cassette for Sentrion S4	7.35 kg	8.25 kg

8.1.7. Installation requirements

The device is intended for fixed installation.

8.1.8. Requirements that the product meets

CE:	CE directive according to: 765/2008
Environment	REACH Regulation: Directive 1907/2006, WEEE Regulation: Directive 20021961E, RoHS Regulation: Directive 2015/863





8.1.9. Limitations

As the unit's details are not assembled, it is the installer's responsibility that these and components are assembled safely and correctly. If 230 V is drawn into the product, the components, plate and door must be earthed.

8.1.10. Guarantee

The product has a two-year warranty against manufacturing defects. Batteries and wearing parts are not covered by warranty.

8.1.11. Manufacturing, lifespan, environmental impact and recycling

Manufactured by Milleteknik in Partille, Sweden.

8.1.12. Link to the latest information

Products and software are subject to updates, you will always find the latest information on our website.

[Accessories & options](#)

8.1.13. About this information

All information is published subject to possible errors. This document is updated without notice.

